


# Wiring Diagram Early Type 912

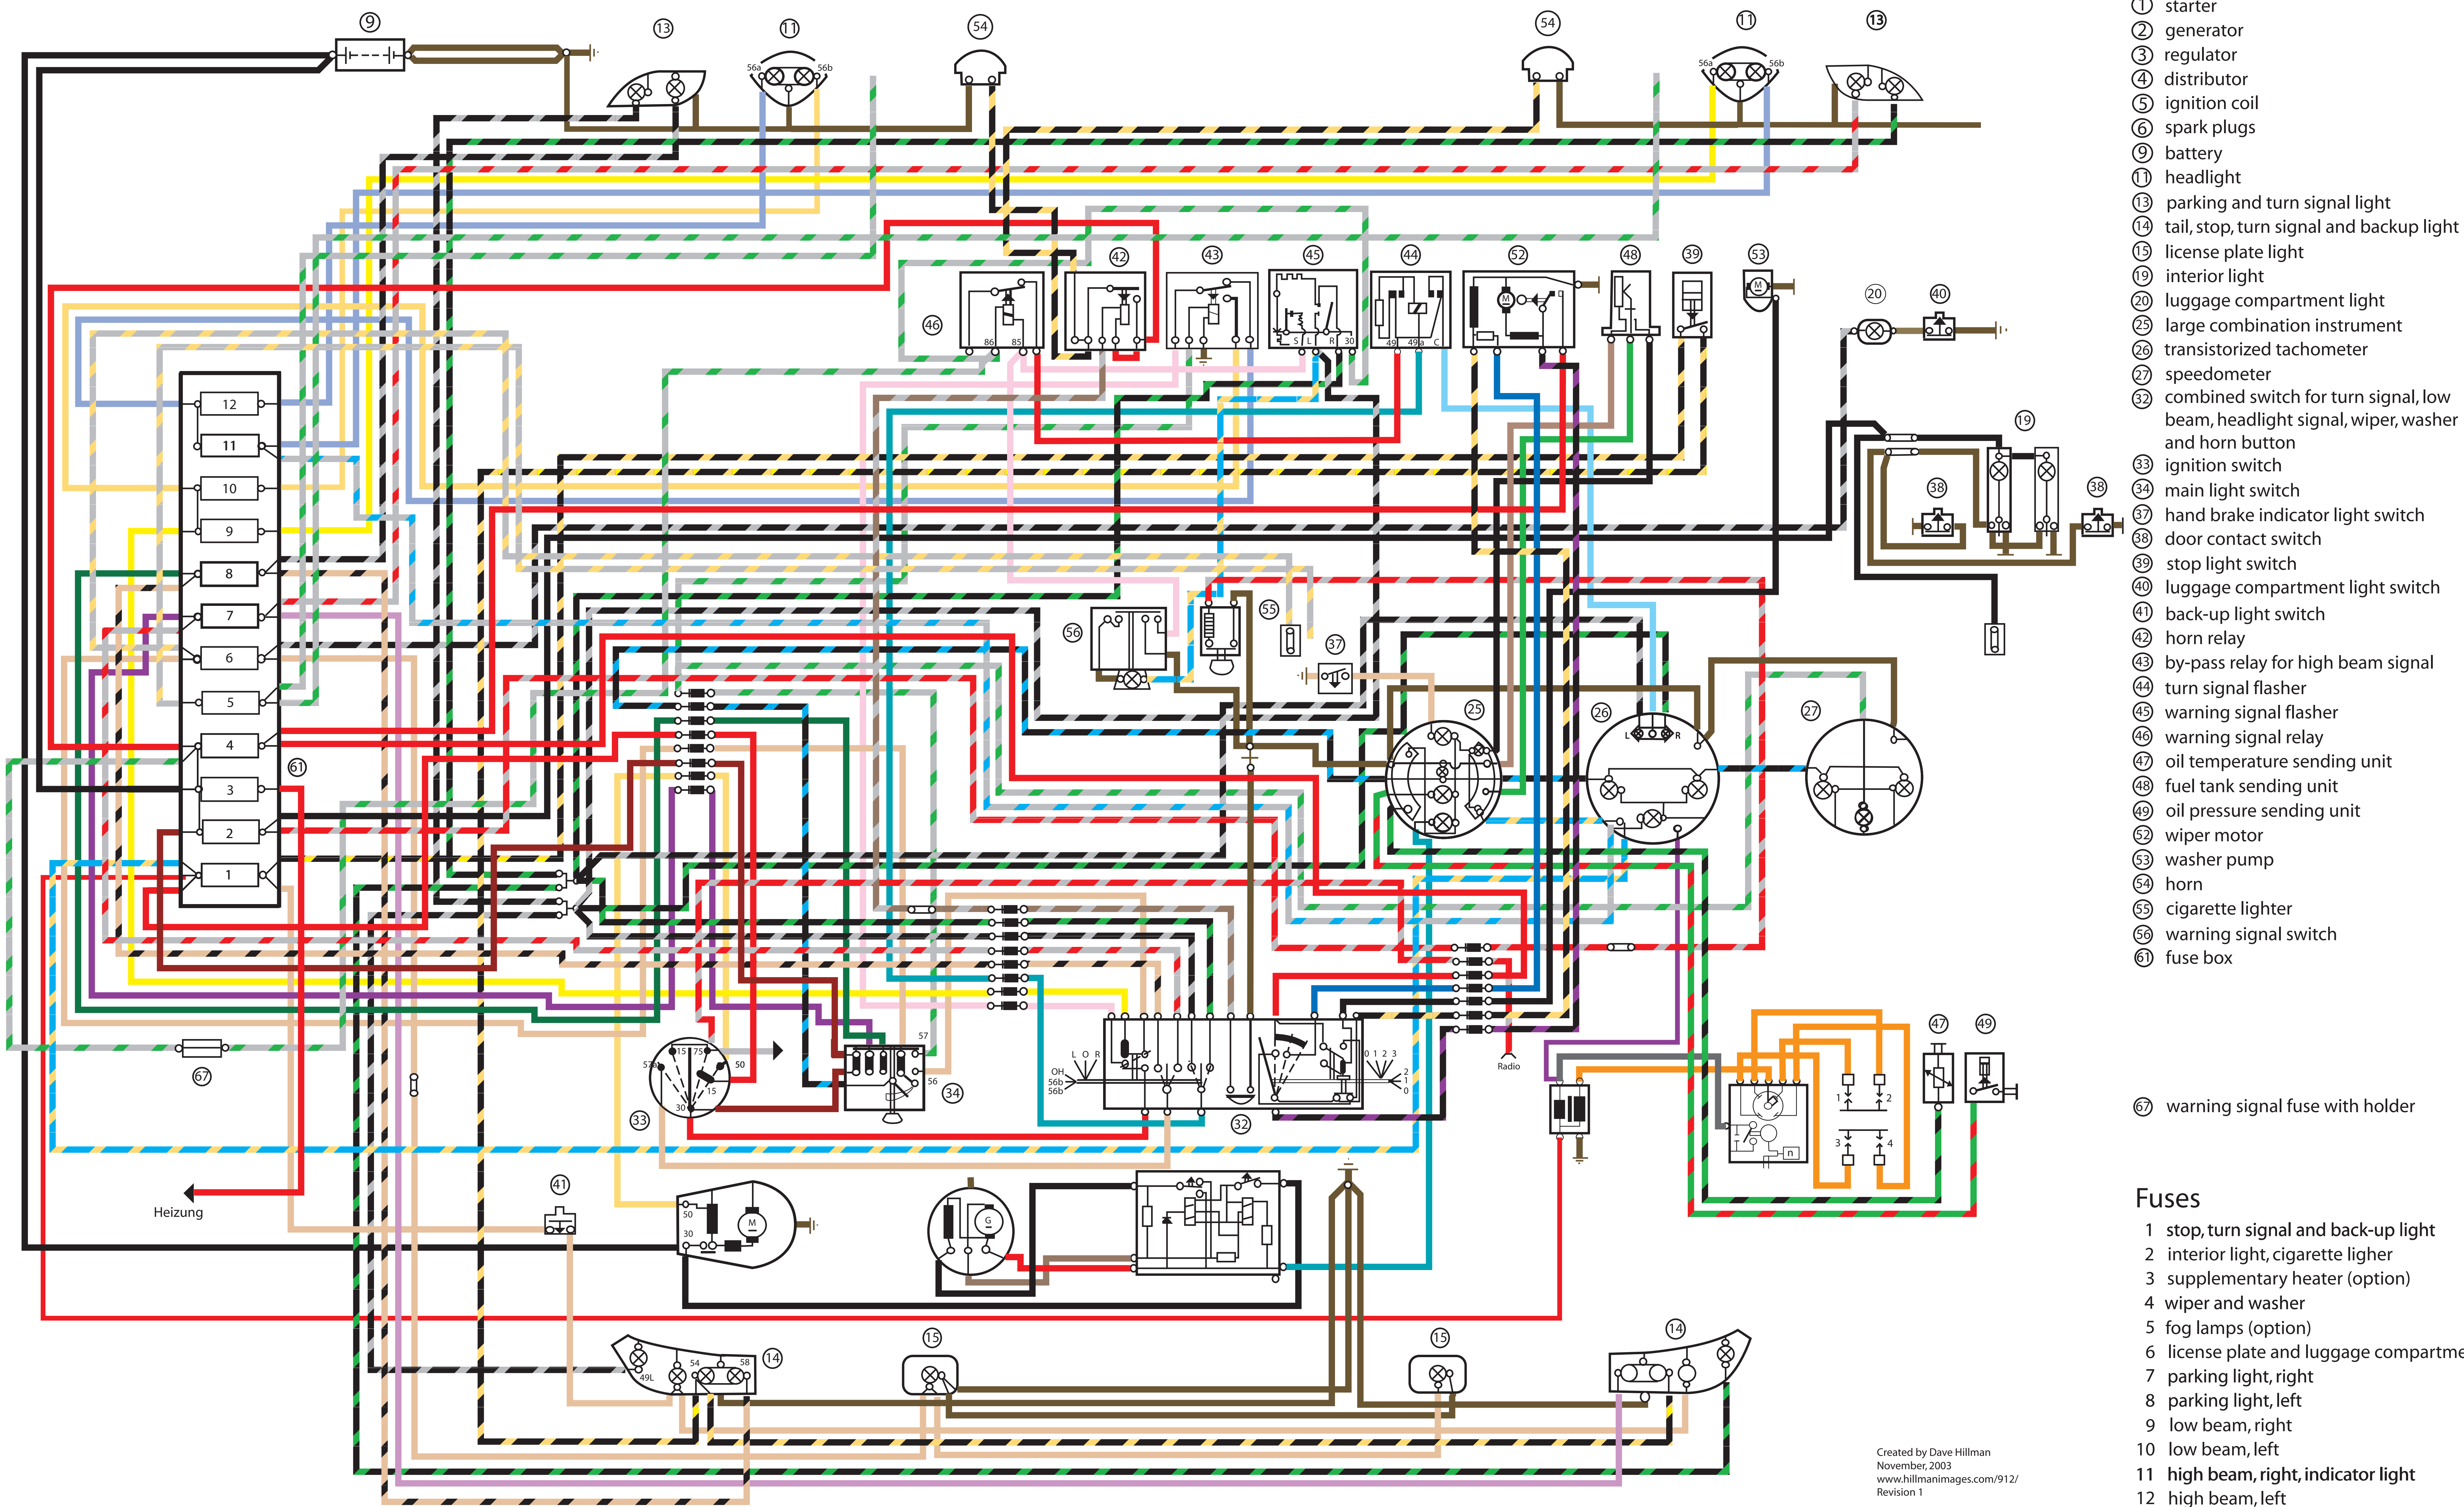

- Legend**
- ① starter
  - ② generator
  - ③ regulator
  - ④ distributor
  - ⑤ ignition coil
  - ⑥ spark plugs
  - ⑨ battery
  - ⑪ headlight
  - ⑬ parking and turn signal light
  - ⑭ tail, stop, turn signal and backup light
  - ⑮ license plate light
  - ⑰ interior light
  - ⑲ luggage compartment light
  - ⑳ large combination instrument
  - ㉔ transistorized tachometer
  - ㉕ speedometer
  - ㉖ combined switch for turn signal, low beam, headlight signal, wiper, washer and horn button
  - ㉗ ignition switch
  - ㉘ main light switch
  - ㉙ hand brake indicator light switch
  - ㉚ door contact switch
  - ㉛ stop light switch
  - ㉜ luggage compartment light switch
  - ㉝ back-up light switch
  - ㉞ horn relay
  - ㉟ by-pass relay for high beam signal
  - ㊱ turn signal flasher
  - ㊲ warning signal flasher
  - ㊳ warning signal relay
  - ㊴ oil temperature sending unit
  - ㊵ fuel tank sending unit
  - ㊶ oil pressure sending unit
  - ㊷ wiper motor
  - ㊸ washer pump
  - ㊹ horn
  - ㊺ cigarette lighter
  - ㊻ warning signal switch
  - ㊼ fuse box

㉞ warning signal fuse with holder

- Fuses**
- 1 stop, turn signal and back-up light
  - 2 interior light, cigarette lighter
  - 3 supplementary heater (option)
  - 4 wiper and washer
  - 5 fog lamps (option)
  - 6 license plate and luggage compartment
  - 7 parking light, right
  - 8 parking light, left
  - 9 low beam, right
  - 10 low beam, left
  - 11 high beam, right, indicator light
  - 12 high beam, left