

	Page
General	
Technical Data	0.2
Cylinder designations	0.7
944 turbo-special model "S" (M 758)	0.8a
Lifting vehicle	0.9
Motor, Kurbelgehäuse	
Tolerances and wear limits	10 - 01
Engine tightening torques	10 - 05
Modified tightening torques for engine	10 - 010
Removing and installing engine	10 - 1
Engine / Crankshaft, Pistons	
Power steering pump belt tightness - checking and adjustment	13 - 1
Alternator and a/c generator Poly-rib belt tightness - checking and adjustment	13 - 2
Balance shafts - tool for checking and adjusting toothed belt tightness	13 - 3
Balance shafts - checking and adjusting toothed belt tightness	13 - 4
Piston and cylinder bore - checking	13 - 8
Balance shaft drive disassembly and assembly	13 - 9
Installing bearing bridges of compensating shafts	13 - 14
Refacing the flywheel	13 - 17
Engine / Cylinder Head, Valve Drive	
Camshafts - checking and adjusting toothed belt tightness	15 - 1
Valve spring installation length - checking and adjustment	15 - 4
Shaft seal on camshaft bearing cover - installation	15 - 5
Engine / Lubrication	
Engine oil and oil filter replacement	17 - 1
Engine / Cooling	
Cooling and heating system - checking for leaks / mixing table for coolant	19 - 1
Fuel Supply	
Fuel filter - replacing / Fuel and injection lines - checking	20 - 1
Fuel pump delivery rate - checking	20 - 2
Fuel lines and fuel system	20 - 3