

	Page
General Data - Clutch, Transmission	
5 - speed manual transmission 016 RIS for 944 turbo	30 - 01
5 - speed manual transmission 083 D for 944 S (as from model 87)	30 - 02
5 - speed manual transmission 016R for 944 turbo S	30 - 03
Technical data (Type 016 R/S)	30 - 04
Tightening torques for manual transmission	30 - 05
Technical data, clutch	30 - 07
Tightening torques for clutch, central tube, transmission mountings and transmission linkage	30 - 08
Clutch Operation	
Clutch play, checking	30 - 1
Clutch driven plate, checking wear	30 - 2
Clutch, removing and installing	30 - 3
Manual Transmission / Operation, Housing	
Oil level, checking	34 - 1
Cooler coil, removing and installing	34 - 3
Gearbox, removing and installing	34 - 5
Gearbox, disassembling and assembling	34 - 11
Rear transmission cover, disassembling and assembling	34 - 23
End plate, disassembling and assembling	34 - 27
Transmission housing, disassembling and assembling	34 - 35
Oil pump, disassembling and assembling	34 - 45
Manual Transmission/Gears, Shafts	
Input shaft, disassembling and assembling	35 - 1
Output shaft, disassembling and assembling	35 - 7
Differential / Transaxle System	
Differential - removal and installation	39 - 1
Differential - disassembly and assembly	39 - 5
Differential bevel gears - adjustment	39 - 11
Limited slip differential - disassembly and assembly (lock ratio: 40%)	39 - 12a
Drive pinion and ring gear - adjustment	39 - 13