

Adjusting tailpipes Page 3 of 4

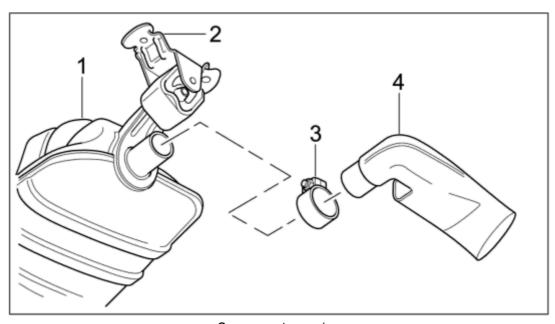


Component overview

- 1 Rear muffler
- 2 2 mounts (align during installation)
- 3 2 tailpipe clamps
- 4 2 tailpipes (align during installation)
- 1. Undo screw -arrow- on tailpipe clamp.

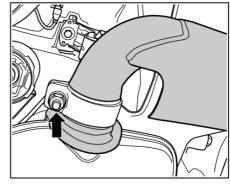

Fastening screw for tailpipe

2. Align tailpipes. The circumferential gap -A- should be → Adjustment value: 31 mm +/-1 mm .

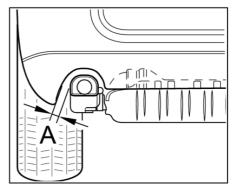

Aligning tailpipes

3. Tighten bolt on tailpipe clamp. → Tightening torque: 44 ftlb. .

9PAAD1, 9PAAD7, 9PAAE1, 9PAAE7